

DAEWOO

The control panel features a central digital display screen. To the left of the screen are three large buttons: 'On/Off', 'Programa', and 'Inicio Diferido'. To the right of the screen are three more large buttons: 'Start/Pause', 'Opción Opção', and 'Selezione'. Below the 'Start/Pause' button is a 'Reset 3 sec.' button, and below the 'Selezione' button is another '3 sec.' button. The panel also includes several smaller buttons with icons: a 'Jet Wash 14'' button with a 'S' icon, a 'Rápido/Rapido 30' 40 °C' button with an asterisk icon, an 'Eco' button, a 'Doble Lavado Pro 60 °C' button, a 'Super 50min. 65 °C' button, a 'Smart 30-50 °C' button, a 'Smart 50-60 °C' button, a 'Smart 60-70 °C' button, a softener icon, a salt icon, a rinse aid icon, and a cycle icon.

DA248F10ES