

DAEWOO

The control panel features a central digital display. To the left of the display are three large buttons: 'On/Off', 'Programa', and 'Inicio Diferido'. To the right of the display are three more large buttons: 'Start/Pause', 'Opción Opção', and 'Seleccione'. The panel also includes several smaller buttons and icons: a 'Jet Wash 14'' button with a dollar sign icon, a 'Rápido/Rapido' button with an asterisk icon, an 'Eco' button, a 'Doble Lavado Pro' button with a 60°C temperature indicator, a 'Super 50min.' button with a 65°C temperature indicator, and three 'Smart' buttons with temperature ranges of 30-50°C, 50-60°C, and 60-70°C. There are also icons for a bottle (likely for detergent), a leaf (eco mode), a circular arrow (rinse), and a moon (night mode). A 'Reset 3 sec.' button is located near the 'Start/Pause' button, and a '3 sec.' button is near the 'Seleccione' button.

DA248FW0ES